

Vent	Length	Opening Temp Between	Max Vent Opening	Max Weight Lifted	Suitable For Window Size upto	Standard Colours	Special Colours £ extra	Ideal for	Additional Info
XL	12" 30cm	55°f & 65°f 13°c & 18°c	12" 30cm	14lb / 6kg	2ft² 60cm	Silver	N/A	Standard greenhse Sheltered from winds	Not for top hinged. Has threaded piston To open @ higher temp, screw clockwise Always had Brass Adjusters fixed in black block
Mk 7 ST	12" 30cm	55°f & 75°f 13°c & 18°c	12" 30cm	14lb / 6kg	2ft² 60cm	Silver	Whte, Brwn, Grn (see price list)	Most standard Grnhses	To open @ higher temp, screw anti-clockwise Not a threaded piston
Mk 7 T/S	12" 30cm	55°f & 75°f 13°c & 18°c	12" 30cm	14lb / 6kg	3ft x 2ft 90 x 60cm	Silver	Whte, Brwn, Grn	Side Vents Roof Vents exposed to winds	
Mk 7 HY	12" 30cm	55°f & 75°f 13°c & 18°c	12" 30cm	14lb / 6kg	3ft x 2ft 90 x 60cm	Silver	Whte, Brwn, Grn	Severe weather conditions	
Mk 7 SPR	15.5"	60°f & 75°f 16°c & 24°c	15"	35lb / 15.5kg	4ft x 2ft 120 x 60cm	White Brown	Silver (waiting time)	Heavy dbl glazed Hinged Vents	Finned Tube

Orchid Wax

Opens between 70 & 110/21 & 44 It was designed for Orchids as they prefer higher temperatures. Not ideal for standard greenhouses with tomatoes as it is too hot for them, they will wilt.

To Reset a unit:

Remove unit from window
Remove knurled Adjuster
Place in fridge for approx 20mins
Replace Knurled Adjuster and run under hot tap.

To find the lifting weight of a window:

Use a small piece of wood & bathroom scales
Push the wood up with scales to open window
This gives an accurate lifting weight
The lifting weight is approx 1/2 the complete weight, as the hinges take half the weight.

Pivot Windows:

Vents can NOT be fitted to windows with central hinges (pivot windows)
Can be fitted to UPVC as long as they are butt hinged

Old XL Unit:

If an XL Unit is ALL aluminium we can NOT repair as tube is riveted in. Send back to us for a brand new unit @ £18.00


Gabriel Ash Replacement Tubes: If the unit is over 3 years old they can send back to us to be re-filled. They cannot replace the tube because the hole in the block is not big enough for them to put the tube back in. OR we can send them a new tube AND block.

When a tube ceases to work under warranty:

Ask how the vent is lying :


1. Incorrect

Is it horizontal to the window?

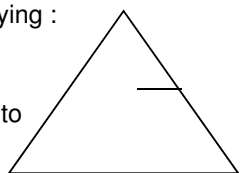

2. Incorrect

Is it pointing towards the floor?

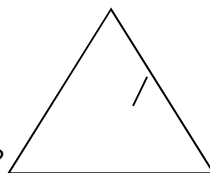

3. Correct

Is it parallel with the glass?

